

Congratulations on becoming a TV-B-Gone Professional!

While most people turn televisions on, you are part of a growing rank of people who turn them off. And not merely from within arms reach, but up to 100 meters away! This is for professionals only! Try this at home, at school, at airports, restaurants, bars, anywhere you see a television. You have the best tool of the trade!

TV-B-Gone Pro SHP is very much like any remote control, except for the lack of all of those extraneous buttons, leaving the only important button: the OFF button. Of course, like other remote controls, the OFF button can also turn TVs on. And sometimes that is worthwhile. For instance, when a waiter in a restaurant keeps turning a TV on after you turn it off, it is sometimes useful to turn it on while they are looking at the TV – that usually freaks them out enough to give up and do their job.

Activation: The sunflower in the middle of the “phone” is the activator button. Click it once to start the transmission sequence. Double click it to start and the visible indicator (in one of the eyes of the buggy-eyed guy) will not blink while transmitting. Push the button for at least 1 second to start the transmission sequence over from the beginning.

Batteries: TV-B-Gone Pro SHP uses two batteries – one CR2032 coin cell and one alkaline 9v battery. Both are easily installed or replaced by opening the unit (4 screws hold the case together). A CR2032 is included with your unit.

Continent Location: Also inside the case is a small switch to tell the TV-B-Gone Pro SHP whether to use the North American (NA) or European (EU) database. You can change the switch as many times as you like. It is fine to change the switch while the batteries are connected.

Your TV-B-Gone Pro SHP will turn off almost every TV you can see. The effective range is up to 100 meters away, under ideal conditions (such as a Sony TV directly in front of you, with no obstructions).

USEFUL TIP: Don't stare at the TV (which is never a good idea), but look at the “phone” as if you're making a call, or texting. This is one of the biggest challenges of being a TV-B-Gone professional.

Quick Start Guide

Your TV-B-Gone Pro SHP is almost ready to go!

Peel off the protective covering from the front of your TV-B-Gone Pro SHP.

Your TV-B-Gone Pro SHP uses two batteries:

- One CR2032 coin cell battery (included)
- One alkaline 9v battery (not included).

To install batteries and set continent location:

1. Remove the four screws from the back and remove the back.
2. Push the CR2032 coin cell all the way down into the slot on the left, between the two clips. Be sure to place the side of the battery marked “+” facing the outside of the board.
3. Connect the alkaline 9v battery to the 9v battery clip at the end of the red and black wires.
4. Set the switch to either NA (North America / Asia) or EU (Europe / Australia).
5. Replace the back and the four screws.

How to use your TV-B-Gone Pro SHP

1. Point at any TV.
2. Click the domed button over the sunflower.
3. Keep pointing at the TV until it turns off (may take up to 56 seconds).

Instant Reactivation Feature

Press and hold the domed button for at least one second during transmission to activate the Instant Reactivation Feature, which starts the transmission sequence over again from the beginning. This is very useful for when there is more than one TV within view. You can also use this feature to turn the same TV back on again. But we recommend that TVs remain off at all times.

Stealth Mode

If you would like to use your TV-B-Gone Pro without the red blinking indicator light, double-click the domed button to start. The red light will blink once when it starts, once again each time you use Instant Reactivation Feature, and 8 times quickly at the end of the transmission sequence to let you know transmission is finished.