

# TV-B-Gone® Pro SHP (Gen 4)

USER'S MANUAL

## Congratulations on becoming a TV-B-Gone Professional!

While most people turn televisions on, you are part of a growing rank of people who turn them off. And not merely from within arms reach, but up to 110 meters away! This is for professionals only! Try this at home, at school, at airports, restaurants, bars, anywhere you see a television. You have the best tool of the trade!

TV-B-Gone Pro SHP is very much like any remote control, except for the lack of all of those extraneous buttons, leaving the only important button: the OFF button. Of course, like other remote controls, the OFF button can also turn TVs on. And sometimes that is worthwhile. For instance, when a waiter in a restaurant keeps turning a TV on after you turn it off, it is sometimes useful to turn it on while they are looking at the TV – that usually freaks them out enough to give up and do their job.

**Activation:** The play button (▶||) is the activator button. Click it once to start the transmission sequence. Double click it to start and the visible indicator will not blink while transmitting. Push the button for at least 1 second to start the transmission sequence over from the beginning.

**Battery:** TV-B-Gone Pro SHP uses a rechargeable battery. A full charge is good for turning off a day's worth of TVs for the hard-working professional user. Charge overnight with the supplied recharger to get ready for your next day of work and play.

**Continent Location:** On the bottom of the case is a small switch to tell the TV-B-Gone Pro SHP whether to use the North American (NA) or European (EU) database. EU is also good for the Middle East, Australia/New Zealand, and some of South America. NA is also good for Asia, and the rest of the world. You can change the switch as many times as you like.

Your TV-B-Gone Pro SHP will turn off almost every TV you can see. The effective range is up to 110 meters away, under ideal conditions (such as a Sony TV directly in front of you, with no obstructions).

## Quick Start Guide

Your TV-B-Gone Pro SHP is almost ready to go!

### Before using your TV-B-Gone Pro, please make sure to:

- recharge the battery with the recharger
- choose either NA or EU with the Continent Location switch

### How to use your TV-B-Gone Pro SHP

1. Point at any TV.
2. Click the play button (▶||).
3. Keep pointing at the TV until it turns off (may take up to 56 seconds).

### Instant Reactivation Feature

Press and hold the Play button for at least one second during transmission to activate the Instant Reactivation Feature, which starts the transmission sequence over again from the beginning. This is very useful for when there is more than one TV within view. You can also use this feature to turn the same TV back on again. But we recommend that TVs remain off at all times.

### Stealth Mode

If you would like to use your TV-B-Gone Pro without the red blinking indicator light, double-click the play button to start. The red light will blink once when it starts, once again each time you use Instant Reactivation Feature, and 8 times quickly at the end of the transmission sequence to let you know transmission is finished.

**USEFUL TIP:** Don't stare at the TV (which is never a good idea), but look at the "mp3 player" as if you're making a selection. This is one of the biggest challenges of being a TV-B-Gone professional.

